

maxell

Semi-Solid-State powerbank

MCP-GSS100PD

Instruction manual

Thank you for purchasing a Maxell product.

Please read this instruction manual carefully before use and use the product correctly.

Checking the contents of the package:

Main unit x1

Charging cable (Around 40cm) x1

Instruction manual
(this document)

1 Introduction

Regarding the Instruction Manual

- This instruction manual may be changed without prior notice in the future.
- Due to product improvements, the appearance or specifications may be changed without prior notice.
- Unauthorized copying of all or part of this instruction manual is prohibited.

Disclaimer

- We assume no responsibility whatsoever for any loss or damage caused by fire, earthquake, actions by third parties, accidents, the customer's willful acts or negligence, misuse, or any other unusual circumstances.
- We assume no responsibility for any damage caused by use other than that described in this instruction manual.
- We assume no responsibility for any damage caused by malfunctions resulting from combinations with other equipment.
- This product is not intended for use in medical equipment, nuclear power equipment, aerospace equipment, transportation equipment, or any other equipment or machinery that involves human life, or in equipment or machinery requiring a high level of reliability. If this product is used in the control systems of such equipment or machinery, and a malfunction of this product results in personal injury, fire, or other accidents, we will not be held liable in any way.

2 Cautions

Do Not Disassemble or Modify.
Disassembling or modifying the product may cause liquid leakage, malfunction, overheating, fire, rupture, or injury.

Do Not Immerse in Water.
Do not immerse the device in water or any other liquids. If water, seawater, juice, or other liquids enter the device, it may cause a short circuit, resulting in malfunction, overheating, fire, rupture, or injury.

Do Not Put in Fire.
Do not throw the device into fire or expose it to heat. This may cause overheating, ignition, explosion, or leakage.

Do Not Short-Circuit the Terminals.
Do not carry or store the device together with metal objects such as necklaces, hairpins, coins, or keys. This may cause a short circuit, resulting in malfunction, overheating, fire, rupture, or injury.

Do Not Connect Input and Output in Reverse.
Do not connect the input and output in reverse. This may cause a short circuit, resulting in malfunction, overheating, fire, explosion, or injury.

Do Not Draw Power from This Product Except via the Built-in USB Port.
When charging the device, use only an AC adapter with USB output. Using any other power sources may cause malfunction, overheating, fire, explosion, electric shock, or injury.

Do Not Store or Use in High-Temperature Locations.
Do not place the device in a car under direct sunlight, near fire, near a stove, or in any location with strong direct sunlight. This may cause deformation, malfunction, or burns.

If Liquid Leaks from This Product and Gets into Your Eyes.
Do not rub your eyes. Immediately wash your eyes with clean water and seek medical attention. This may cause blindness or other serious injuries.

If You Notice Any Abnormalities.
Do not use the product if you notice any abnormalities such as overheating, discoloration, deformation, or any other unusual signs during storage or use. This may cause fire, rupture, leakage, or injury.

If Liquid Inside This Product Contacts Your Skin or Clothing.
Immediately wash the affected area thoroughly with clean water. This may cause skin irritation or damage.

If Charging is Not Completed after the Specified Time.
Stop charging immediately. This may cause leakage, overheating, fire, or rupture.

Do Not Use in Humid Places Such as Bathrooms.
Do not use the device in humid or wet locations, such as bathrooms. This may cause overheating, electric shock, or malfunction.

Do Not Apply Strong Loads or Impacts, Such as Stepping on It or Dropping It.
Doing so may cause leakage, malfunction, overheating, fire, rupture, or injury.

Do Not Place Flammable Materials or Heavy Objects on It, and Do Not Cover or Wrap It with Cloth or Cushions.
This may cause overheating, fire, rupture, or leakage.

Do Not Place It Inside Heating Appliances Such as Microwave Ovens or High Pressure Cookers.
This may cause overheating, smoke, or fire.

Do Not Use in Places Where There is a Risk of Ignition or Explosion.
This may cause an explosion or fire.

Do Not Use With Wet Hands.
This may cause overheating, electric shock, or malfunction.

Do Not Insert Metal or Other Metallic Objects Into the Main Unit.
This may cause overheating, electric shock, or malfunction.

When Children Use the Product, Parents Should Thoroughly Teach Them the Correct Usage.
Please also ensure that the product is being used safely during operation. Improper use may cause electric shock or injury.

Use and Store the Product Out of the Reach of Infants and Young Children.
Failure to do so may cause electric shock or injury.

Do Not Place the Device in Locations Where It May Fall or in Areas With Strong Magnetic Fields or Excessive Dust.
This may cause injury, overheating, fire, rupture, or leakage.

Charge Within a Temperature Range of 5 - 40°C.
Charging outside this range may cause leakage, overheating, rupture, or malfunction.

Charge the Battery at Least Once Every Six Months.
Leaving the battery uncharged for extended periods may cause degradation, which could prevent it from being recharged.

Do Not Apply Excessive Force.
This may cause deformation, leakage, overheating, fire, rupture, or malfunction.

3 At a Glance

[Main body]

Type C 2 (OUT 3)

Type C 1 (IN / OUT 2)

USB-A (OUT 1)

On/Off button

LED

[Charging cable]

Type C plug

Type C plug

Charging Capacity LED

0 - 25%	25 - 50%	50 - 75%	75 - 99%	100% (Full)

...Turned on ...Blinks ...Turned off

LED Capacity Indicator

75 - 100%	50 - 75%	25 - 50%	5 - 25%	1 - 5%	0%

※ When the power button is pressed while the cable is not connected, the remaining battery level indicator will light up for approximately 30 seconds.

※ The indicator provides an estimated value. Actual readings may vary depending on the performance of the connected AC adapter, discharge load, ambient temperature, and other conditions.

4 How to Use Please charge before use.

Charging This Product

1. Using the included charging cable, connect the input/output terminals of this product to the USB output of the AC adapter. During charging, the LEDs will light up and blink according to the charging status.

2. When fully charged, all LEDs will remain lit. To end charging, unplug the cable.

Charging time:
Around 3.5 hours (when using 9V2A input).

Important notes:

- Please use the included charging cable to charge this product. • Using other cables may cause overheating, deformation, or short circuits. • If charging is not complete after the specified time, please stop charging. • If you do not use this product for a long period of time, please charge it once every six months. • If the battery is completely discharged by self-discharge, charging may not be possible or may take a long time. • This product supports DC 5V 3A/ 9V 2A charging, but charging time will vary depending on the battery level, the AC adapter you are using, and the ambient temperature.

Charging Your Device

1. Using the included charging cable, or the cable recommended by your device, connect the output terminal of this product to your device. The LED will light up and charging will begin. (If charging does not begin, press the power button).

2. Check the charging status on the charging indicator of the connected device.

The output terminal will automatically stop supplying power, and the LED will turn off when the connected device is fully charged and the current drops to approximately 5 - 10mA or less.

Depending on the connected device, it may not automatically stop even when fully charged. If you wish to stop output manually, press the power button twice. When the product is hot, avoid holding it for extended periods.

Important notes:

- When the battery level is low or the internal temperature rises, the output current may be limited.
- Devices that require communication with a computer may not charge properly. • When the device's battery level is at 0%, it may take time before the device becomes operable, or it may not charge at all. • We are not responsible for any loss of data stored on the connected device while using this product.

This product allows you to charge your devices simultaneously while charging the product itself.

It supports pass-through charging, enabling device charging during the product's own charging process.

Important notes:

- Depending on the equipment and cables used, the charging speed may be slower. • In pass-through mode, the current protection function of this product does not operate. Please be cautious, as the AC adapter may overheat due to excessive current.

5 Low Current Charging Mode

To enter Low Current Charging Mode, press the button once to turn on the power bank.

Then, press and hold the button for more than 2 seconds until the LEDs flash in a carousel pattern.

The power bank will exit Low Current Charging Mode automatically after 2 hours, or immediately if you double press the button.

6 Maintenance Instructions

To remove dirt from the body, use a cloth dampened with a mild detergent or water, and wipe with a soft, dry cloth. Do not use benzine, thinner, alcohol, etc.

7 Troubleshooting

Issue	Possible Cause	Solution
When this product is charging, the LED does not blink.	The computer's USB port is used, and the computer is in standby mode.	Disable the computer's standby mode.
	The built-in battery temperature exceeds the operating temperature range.	Leave the product at room temperature for a while before charging.
	The battery was left unused for a long period with no remaining charge, causing complete discharge and deterioration.	The product cannot be used. Please avoid fully discharging it. Charge at least once every 6 months.
Charging time is longer than specified.	Pass-through charging is being used.	Stop pass through charging.
	The USB port is not supplying sufficient power.	Use a PD compatible AC adapter.

The main unit is warm.	The device may become warm during charging and immediately after charging/discharging. This is not abnormal.	Wait for a while before using.
The LED does not light up when the button is pressed.	Battery is fully depleted.	Charge this product.
	The overcurrent protection circuit was activated.	Charge this product.
Device cannot be charged.	Incorrect cable or connector used.	Check the connector type of the device.
	Poor terminal contact.	Check the connection.
	Charging while using the device (e.g., video playback).	Enable airplane mode or turn off the device's screen.
Short discharge time.	Low battery charge level.	Charge the product.
	Used in a high temperature environment, causing temperature protection activation.	Leave the product at room temperature for a while before use.
	Used in a low temperature environment.	Battery capacity decreases at low temperatures, resulting in shorter discharge time.
	Battery deterioration.	If discharge time becomes extremely short even after a full charge, the battery has reached the end of its lifespan.

8 Specifications

Main Body

- **Dimensions:** 141mm (L) × 69.5mm (W) × 15.9mm (H)
- **Weight:** Around 220g
- **Capacity:** Semi solid state lithium battery 3.7V / 10Ah (37Wh)
- **Operating Temperature:** 0 - 40°C
- **Input:** Type C (PD 3.0 18W) DC 5V / 3A, 9V / 2A

Outputs

- **Out1:** USB A (QC 18 W): DC 5V / 3A, 9V / 2A, 12V / 1.5A
- **Out2:** Type C1 (PD 3.0 20W): DC 5V / 3A, 9V / 2.22A, 12V / 1.67A
- **Out3:** Type C2 (QC 18W): DC 5V / 3A, 9V / 2A, 12V / 1.5A
- **Combined Output (Out1 + Out2 + Out3):** 5V / 3A (max)

Accessory

- **Charging cable:** Type C to Type C (Around 40cm)

Maxell Asia, Ltd.

Units nos. 03B-06, 13/F,
909 Cheung Sha Wan Road,
Cheung Sha Wan, Kowloon, Hong Kong
Tel: (852) 2730 9243

Maxellhk

Maxellhk


www.maxell.com.hk

Semi-Solid-State powerbank
MCP-GSS100PD

Hướng dẫn sử dụng

Cảm ơn quý khách đã mua sản phẩm Maxell.
Vui lòng đọc kỹ hướng dẫn sử dụng này trước khi sử dụng và sử dụng sản phẩm đúng cách.

Kiểm tra nội dung trong hộp:

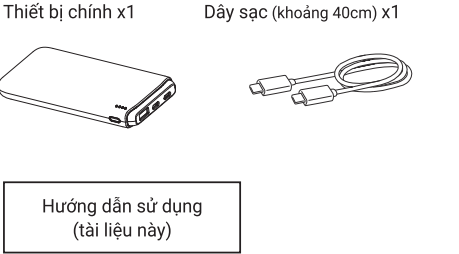

1 Giới thiệu

Về Sách hướng dẫn

- Hướng dẫn sử dụng này có thể được thay đổi trong tương lai mà không cần thông báo trước.
- Do các cải tiến sản phẩm, hình dáng hoặc thông số kỹ thuật có thể được thay đổi mà không cần thông báo trước.
- Việc sao chép trái phép toàn bộ hoặc một phần của hướng dẫn sử dụng này bị cấm.

Miễn trừ trách nhiệm

- Chúng tôi không chịu bất kỳ trách nhiệm nào đối với bất kỳ tổn thất hoặc thiệt hại nào do hỏa hoạn, động đất, hành động của bên thứ ba, tai nạn, hành vi cố ý hoặc sơ suất của khách hàng, sử dụng sai mục đích hoặc bất kỳ trường hợp bất thường nào khác gây ra.
- Chúng tôi không chịu trách nhiệm đối với bất kỳ thiệt hại nào do việc sử dụng không đúng theo hướng dẫn trong tài liệu này.
- Chúng tôi không chịu trách nhiệm về bất kỳ thiệt hại nào do sự cố kỹ thuật gây ra khi kết hợp với các thiết bị khác.
- Sản phẩm này không được thiết kế để sử dụng trong thiết bị y tế, thiết bị năng lượng hạt nhân, thiết bị hàng không vũ trụ, thiết bị giao thông vận tải hoặc bất kỳ thiết bị hoặc máy móc nào khác liên quan đến tính mạng con người, hoặc trong thiết bị hoặc máy móc yêu cầu mức độ tin cậy cao. Nếu sản phẩm này được sử dụng trong hệ thống điều khiển của các thiết bị hoặc máy móc đó, và sự cố của sản phẩm này dẫn đến thương tích, hỏa hoạn hoặc các tai nạn khác, chúng tôi sẽ không chịu bất kỳ trách nhiệm pháp lý nào.

2 Lưu ý

	Không tháo rời hoặc sửa đổi. Việc tháo rời hoặc sửa đổi sản phẩm có thể gây rò rỉ chất lỏng, hỏng hóc, quá nhiệt, cháy nổ, vỡ hoặc thương tích.
	Không ngâm trong nước. Không ngâm thiết bị trong nước hoặc bất kỳ chất lỏng nào khác. Nếu nước, nước biển, nước trái cây hoặc các chất lỏng khác xâm nhập vào thiết bị, có thể gây ra đoản mạch, dẫn đến sự cố, quá nhiệt, hỏa hoạn, vỡ hoặc thương tích.
	Không được ném vào lửa. Không ném thiết bị vào lửa hoặc để thiết bị tiếp xúc với nhiệt. Điều này có thể gây ra quá nhiệt, cháy, nổ hoặc rò rỉ.
	Không được làm chập mạch các cực. Không mang theo hoặc cất giữ thiết bị cùng với các vật kim loại như dây chuyền, kẹp tóc, tiền xu hoặc chìa khóa. Điều này có thể gây ra đoản mạch, dẫn đến hỏng hóc, quá nhiệt, cháy, nổ hoặc thương tích.
	Không kết nối đầu vào và đầu ra ngược. Không kết nối đầu vào và đầu ra ngược lại. Điều này có thể gây ra ngắn mạch, dẫn đến hỏng hóc, quá nhiệt, cháy, nổ hoặc thương tích.

	Không lấy điện từ sản phẩm này trừ khi qua cổng USB tích hợp. Khi sạc thiết bị, chỉ sử dụng bộ chuyển đổi AC có đầu ra USB. Sử dụng bất kỳ nguồn điện nào khác có thể gây ra sự cố, quá nhiệt, cháy, nổ, điện giật hoặc thương tích.
	Không bảo quản hoặc sử dụng ở những nơi có nhiệt độ cao. Không đặt thiết bị trong xe ô tô dưới ánh nắng trực tiếp, gần lửa, gần bếp hoặc ở bất kỳ nơi nào có ánh nắng trực tiếp mạnh. Điều này có thể gây biến dạng, hỏng hóc hoặc bùng.
	Nếu chất lỏng rò rỉ từ sản phẩm này và dính vào mắt. Không được dụi mắt. Rửa mắt ngay lập tức bằng nước sạch và đi khám bác sĩ. Điều này có thể gây mù lòa hoặc các thương tích nghiêm trọng khác.
	Nếu bạn nhận thấy bất kỳ sự bất thường nào. Không sử dụng sản phẩm nếu bạn nhận thấy bất kỳ sự bất thường nào như quá nóng, đổi màu, biến dạng hoặc bất kỳ dấu hiệu bất thường nào khác trong quá trình bảo quản hoặc sử dụng. Điều này có thể gây ra hỏa hoạn, vỡ, rò rỉ hoặc thương tích.


	Nếu chất lỏng bên trong sản phẩm này tiếp xúc với da hoặc quần áo của bạn. Rửa ngay vùng da bị ảnh hưởng bằng nước sạch. Điều này có thể gây kích ứng hoặc tổn thương da.
	Nếu quá trình sạc không hoàn tất sau thời gian quy định. Ngừng sạc ngay lập tức. Điều này có thể gây rò rỉ, quá nhiệt, cháy nổ hoặc vỡ.
	Không sử dụng ở những nơi ẩm ướt như phòng tắm. Không sử dụng thiết bị ở những nơi ẩm ướt, chẳng hạn như phòng tắm. Điều này có thể gây ra quá nhiệt, điện giật hoặc hỏng hóc.
	Không tác động lực mạnh hoặc va đập mạnh, chẳng hạn như dẫm lên hoặc làm rơi thiết bị. Làm như vậy có thể gây rò rỉ, hỏng hóc, quá nhiệt, cháy, vỡ hoặc thương tích.
	Không đặt vật liệu dễ cháy hoặc vật nặng lên thiết bị, và không che phủ hoặc bọc thiết bị bằng vải hoặc gói. Điều này có thể gây ra quá nhiệt, cháy, vỡ hoặc rò rỉ.

	Không đặt thiết bị bên trong các thiết bị gia nhiệt như lò vi sóng hoặc nồi áp suất. Điều này có thể gây quá nhiệt, khói hoặc cháy.
	Không sử dụng ở những nơi có nguy cơ cháy nổ. Điều này có thể gây ra nổ hoặc cháy.
	Không sử dụng khi tay ướt. Điều này có thể gây quá nhiệt, điện giật hoặc hỏng hóc.
	Không đưa kim loại hoặc các vật dụng kim loại khác vào thân máy. Điều này có thể gây ra quá nhiệt, điện giật hoặc hỏng hóc.
	Khi trẻ em sử dụng sản phẩm, cha mẹ nên hướng dẫn kỹ lưỡng cho trẻ cách sử dụng đúng. Vui lòng đảm bảo sản phẩm được sử dụng an toàn trong quá trình vận hành. Việc sử dụng không đúng cách có thể gây ra điện giật hoặc thương tích.


	Sử dụng và bảo quản sản phẩm ngoài tầm với của trẻ sơ sinh và trẻ nhỏ. Nếu không tuân thủ, có thể gây ra điện giật hoặc thương tích.
	Không đặt thiết bị ở những nơi có thể bị rơi hoặc ở những khu vực có từ trường mạnh hoặc bụi bẩn quá nhiều. Điều này có thể gây thương tích, quá nhiệt, cháy, vỡ hoặc rò rỉ.
	Sạc trong khoảng nhiệt độ từ 5 - 40°C. Sạc ngoài phạm vi này có thể gây rò rỉ, quá nhiệt, vỡ hoặc hỏng hóc.
	Sạc pin ít nhất một lần mỗi sáu tháng. Đế pin không được sạc trong thời gian dài có thể gây suy giảm chất lượng, dẫn đến pin không thể sạc lại được.
	Không tác động lực quá mạnh. Điều này có thể gây biến dạng, rò rỉ, quá nhiệt, cháy, vỡ hoặc hỏng hóc.

3 Tóm tắt


[Thân chính]

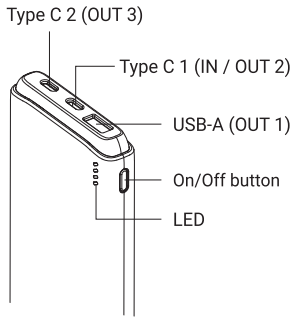

[Dây sạc]

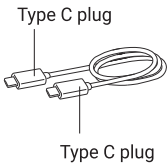

Sản phẩm này cho phép bạn sạc các thiết bị của mình đồng thời trong khi đang sạc chính sản phẩm.

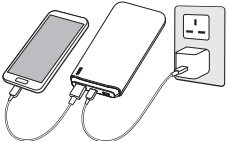

Sản phẩm hỗ trợ sạc qua (pass-through), cho phép sạc thiết bị trong khi sản phẩm đang được sạc.

Lưu ý quan trọng:
• Tùy thuộc vào thiết bị và cáp được sử dụng, tốc độ sạc có thể chậm hơn. • Trong chế độ truyền qua, chức năng bảo vệ dòng điện của sản phẩm này không hoạt động. Vui lòng cẩn thận vì bộ chuyển đổi AC có thể quá nhiệt do dòng điện quá tải.

5 Chế độ sạc dòng điện thấp

Để vào Chế độ sạc dòng điện thấp, nhấn nút một lần để bật pin sạc dự phòng.

Sau đó, nhấn và giữ nút trong hơn 2 giây cho đến khi đèn LED nhấp nháy theo kiểu xoay vòng.

Bộ sạc dự phòng sẽ tự động thoát khỏi Chế độ sạc dòng điện thấp sau 2 giờ, hoặc ngay lập tức nếu bạn nhấn đúp vào nút.

Đèn LED hiển thị mức sạc

				
0 - 25%	25 - 50%	50 - 75%	75 - 99%	100% (Sạc đầy)
				
...Bật	...Chớp nháy	...Tắt		

Đèn LED hiển thị dung lượng

					
75 - 100%	50 - 75%	25 - 50%	5 - 25%	1 - 5%	0%

- ※ Khi nhấn nút nguồn trong khi cáp chưa được kết nối, đèn báo mức pin còn lại sẽ sáng trong khoảng 30 giây.
- ※ Đèn báo này cung cấp giá trị ước tính. Các chỉ số thực tế có thể thay đổi tùy thuộc vào hiệu suất của bộ chuyển đổi AC được kết nối, tải xả, nhiệt độ môi trường và các điều kiện khác.

6 Hướng dẫn bảo trì

Để làm sạch bụi bẩn trên vỏ, hãy dùng vải thấm nước hoặc chất tẩy rửa nhẹ, sau đó lau bằng vải mềm và khô. Không sử dụng xăng, dung môi, cồn, v.v.

7 Khắc phục sự cố

Vấn đề	Nguyên nhân có thể	Giải pháp
Khi sản phẩm đang sạc, đèn LED không nhấp nháy.	Cổng USB của máy tính đang được sử dụng và máy tính đang ở chế độ chờ.	Tắt chế độ chờ của máy tính.
	Nhiệt độ pin tích hợp vượt quá phạm vi nhiệt độ hoạt động.	Hãy để sản phẩm ở nhiệt độ phòng một lúc trước khi sạc.
	Pin đã không được sử dụng trong thời gian dài mà không còn điện, dẫn đến xả hết pin và hư hỏng.	Sản phẩm không thể sử dụng được. Vui lòng tránh để pin xả hết hoàn toàn. Hãy sạc ít nhất một lần mỗi 6 tháng.
Thời gian sạc lâu hơn so với quy định.	Đang sử dụng chế độ sạc qua (pass-through).	Hãy ngừng sạc qua cổng.
	Cổng USB không cung cấp đủ điện.	Sử dụng bộ chuyển đổi AC tương thích với PD.

4 Cách sử dụng

Vui lòng sạc trước khi sử dụng.

Sạc sản phẩm này

- Sử dụng cáp sạc đi kèm, kết nối các đầu vào/đầu ra của sản phẩm này với cổng USB của bộ chuyển đổi AC. Trong quá trình sạc, đèn LED sẽ sáng và nhấp nháy tùy theo trạng thái sạc.
- Khi sạc đầy, tất cả đèn LED sẽ sáng liên tục. Để kết thúc quá trình sạc, hãy rút cáp ra.

Thời gian sạc:
Khoảng 3,5 giờ (Khi sử dụng đầu vào 9V2A).

Lưu ý quan trọng:
• Vui lòng sử dụng cáp sạc đi kèm để sạc sản phẩm này. • Việc sử dụng các loại cáp khác có thể gây ra hiện tượng quá nhiệt, biến dạng hoặc chập mạch. • Nếu quá trình sạc không hoàn tất sau thời gian quy định, vui lòng ngừng sạc. • Nếu bạn không sử dụng sản phẩm này trong một thời gian dài, vui lòng sạc lại mỗi sáu tháng một lần. • Nếu pin bị xả hết do tự xả, việc sạc có thể không thực hiện được hoặc mất nhiều thời gian. • Sản phẩm này hỗ trợ sạc DC 5V 3A/ 9V 2A, nhưng thời gian sạc sẽ thay đổi tùy thuộc vào mức pin, bộ chuyển đổi AC bạn đang sử dụng và nhiệt độ môi trường.

Thiết bị chính đang ẩm.	Thiết bị có thể nóng lên trong và ngay sau khi sạc/ xả. Điều này là bình thường.	Hãy đợi một lúc trước khi sử dụng.
Đèn LED không sáng khi nhấn nút.	Pin đã cạn kiệt hoàn toàn.	Hãy sạc sản phẩm này.
	Mạch bảo vệ quá dòng đã được kích hoạt.	Hãy sạc sản phẩm này.
Không thể sạc thiết bị.	Đã sử dụng cáp hoặc đầu nối không đúng.	Kiểm tra loại đầu nối của thiết bị.
	Tiếp xúc đầu cắm kém.	Kiểm tra kết nối.
	Đang sạc trong khi sử dụng thiết bị (ví dụ: phát video).	Bật chế độ máy bay hoặc tắt màn hình thiết bị.
Thời gian xả pin ngắn.	Mức pin thấp.	Sạc sản phẩm.
	Sử dụng trong môi trường nhiệt độ cao, gây kích hoạt cơ chế bảo vệ nhiệt độ.	Để sản phẩm ở nhiệt độ phòng một lúc trước khi sử dụng.
	Sử dụng trong môi trường nhiệt độ thấp.	Dung lượng pin giảm ở nhiệt độ thấp, dẫn đến thời gian xả pin ngắn hơn.
	Pin bị suy giảm.	Nếu thời gian xả pin trở nên cực kỳ ngắn cả sau khi sạc đầy, pin đã hết tuổi thọ.

8 Thông số kỹ thuật

Thân chính

- Kích thước:** 141mm (Dài) × 69.5mm (Rộng) × 15.9mm (Cao)
- Trọng lượng:** Khoảng 220g
- Dung lượng:** Pin lithium bán rắn 3.7 V / 10 Ah (37 Wh)
- Nhiệt độ hoạt động:** 0 - 40°C
- Đầu vào:** Type C (PD 3.0 18W) DC 5V / 3A, 9V / 2A

Cổng ra

- Cổng ra 1:** USB A (QC 18 W): DC 5V / 3A, 9V / 2A, 12V / 1.5A
- Cổng ra 2:** Type C1 (PD 3.0 20W): DC 5V / 3A, 9V / 2.22A, 12V / 1.67A
- Cổng ra 3:** Type C2 (QC 18W): DC 5V / 3A, 9V / 2A, 12V / 1.5A
- Công suất kết hợp (Cổng ra 1 + Cổng ra 2 + Cổng ra 3):** 5V / 3A (tối đa)

Phụ kiện

- Dây sạc:** Type C sang Type C (Khoảng 40cm)